

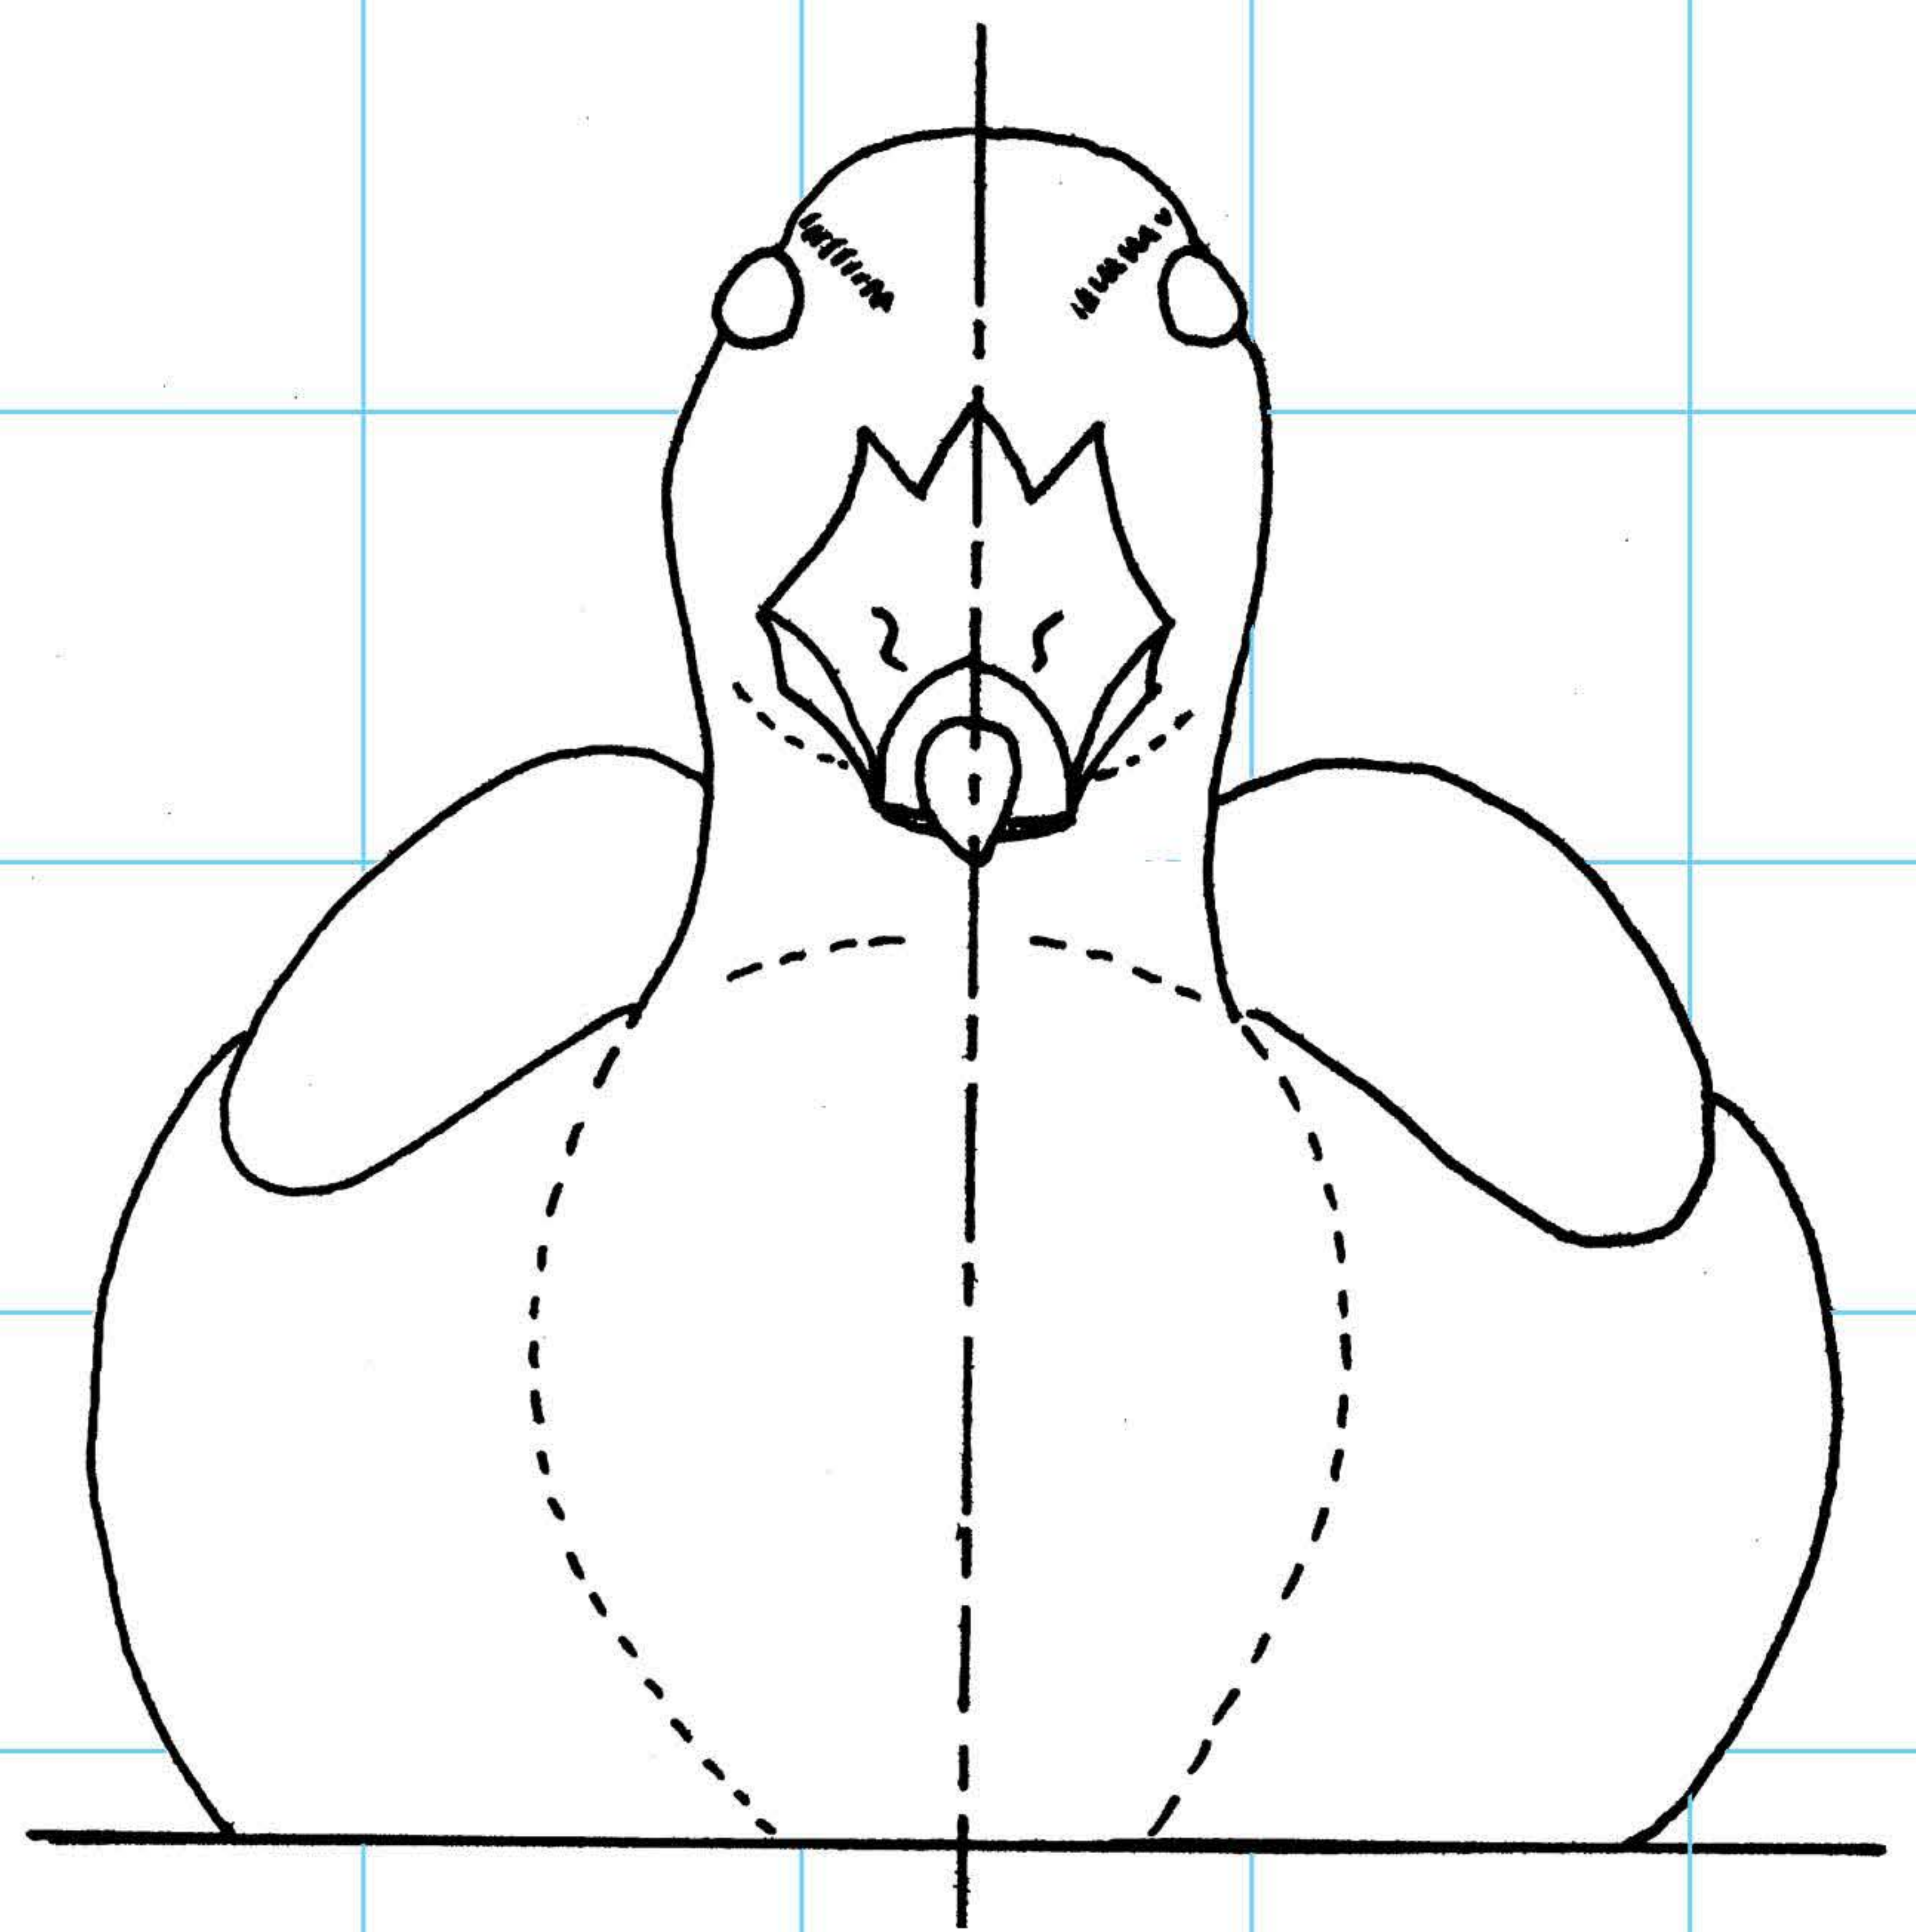


Use a 1/4" drill bit for inserted eyes

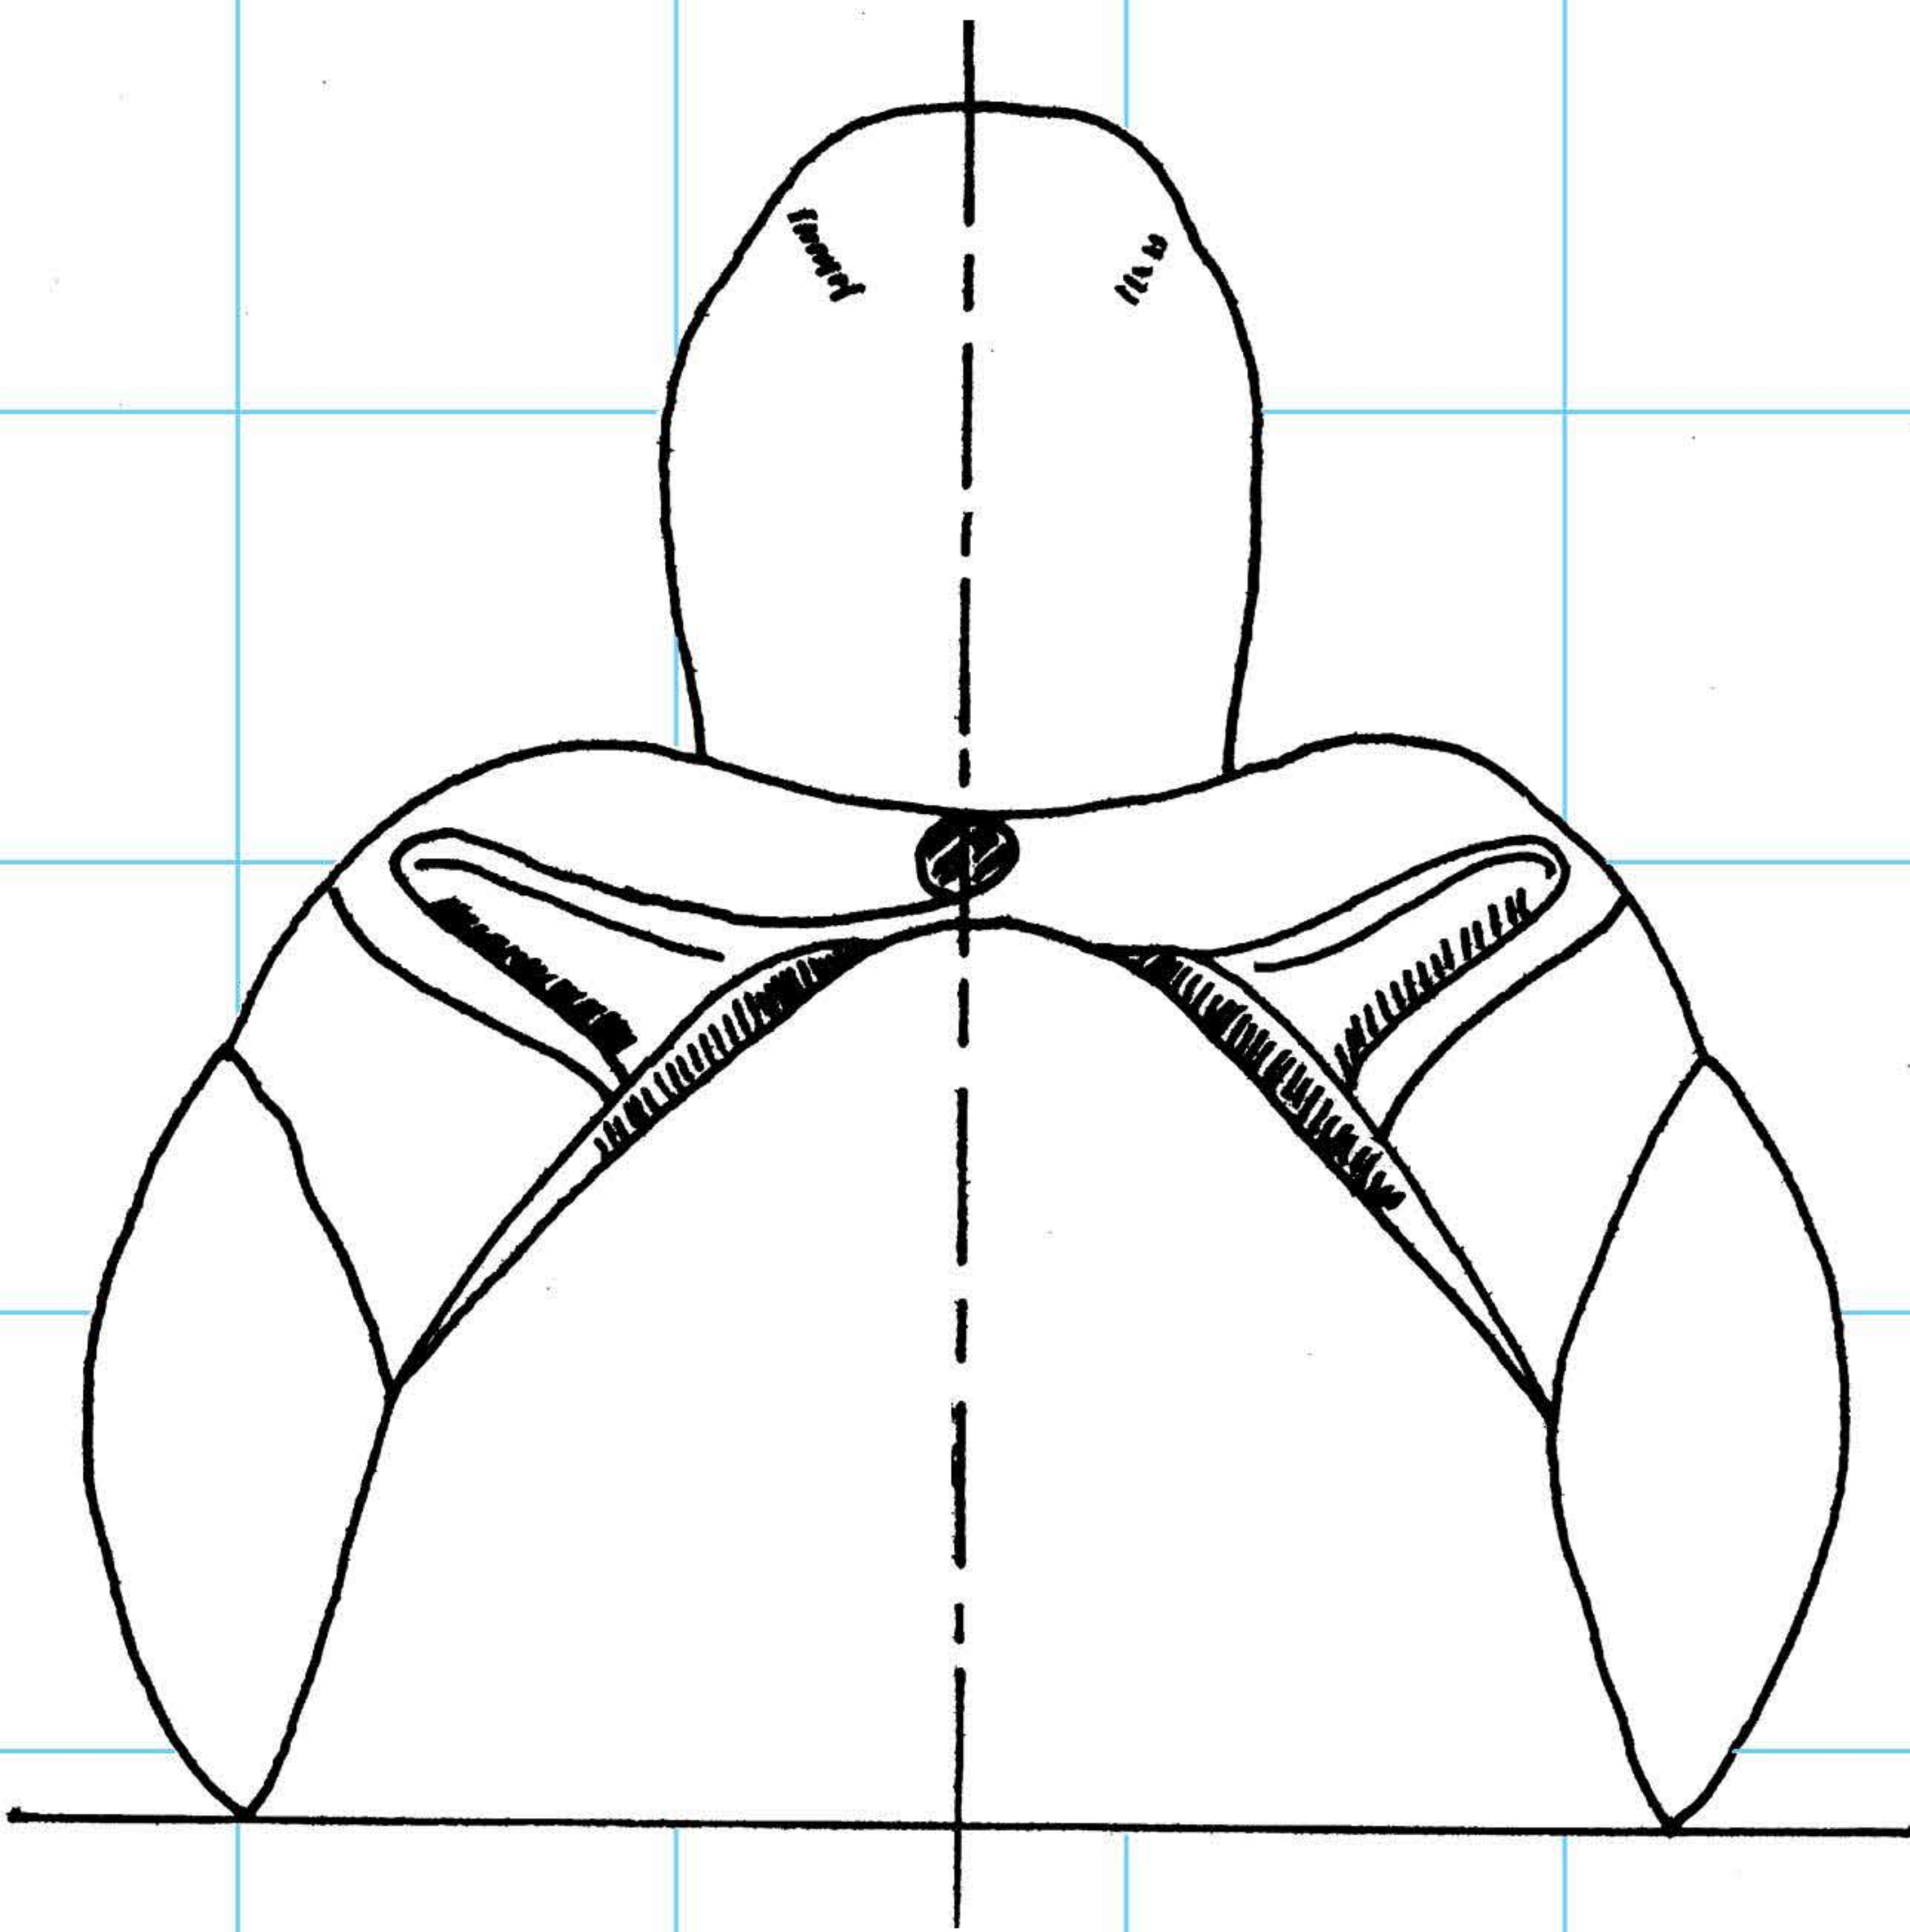

Use a 1/8" drill bit to make 1"-deep pilot holes for holding block screws

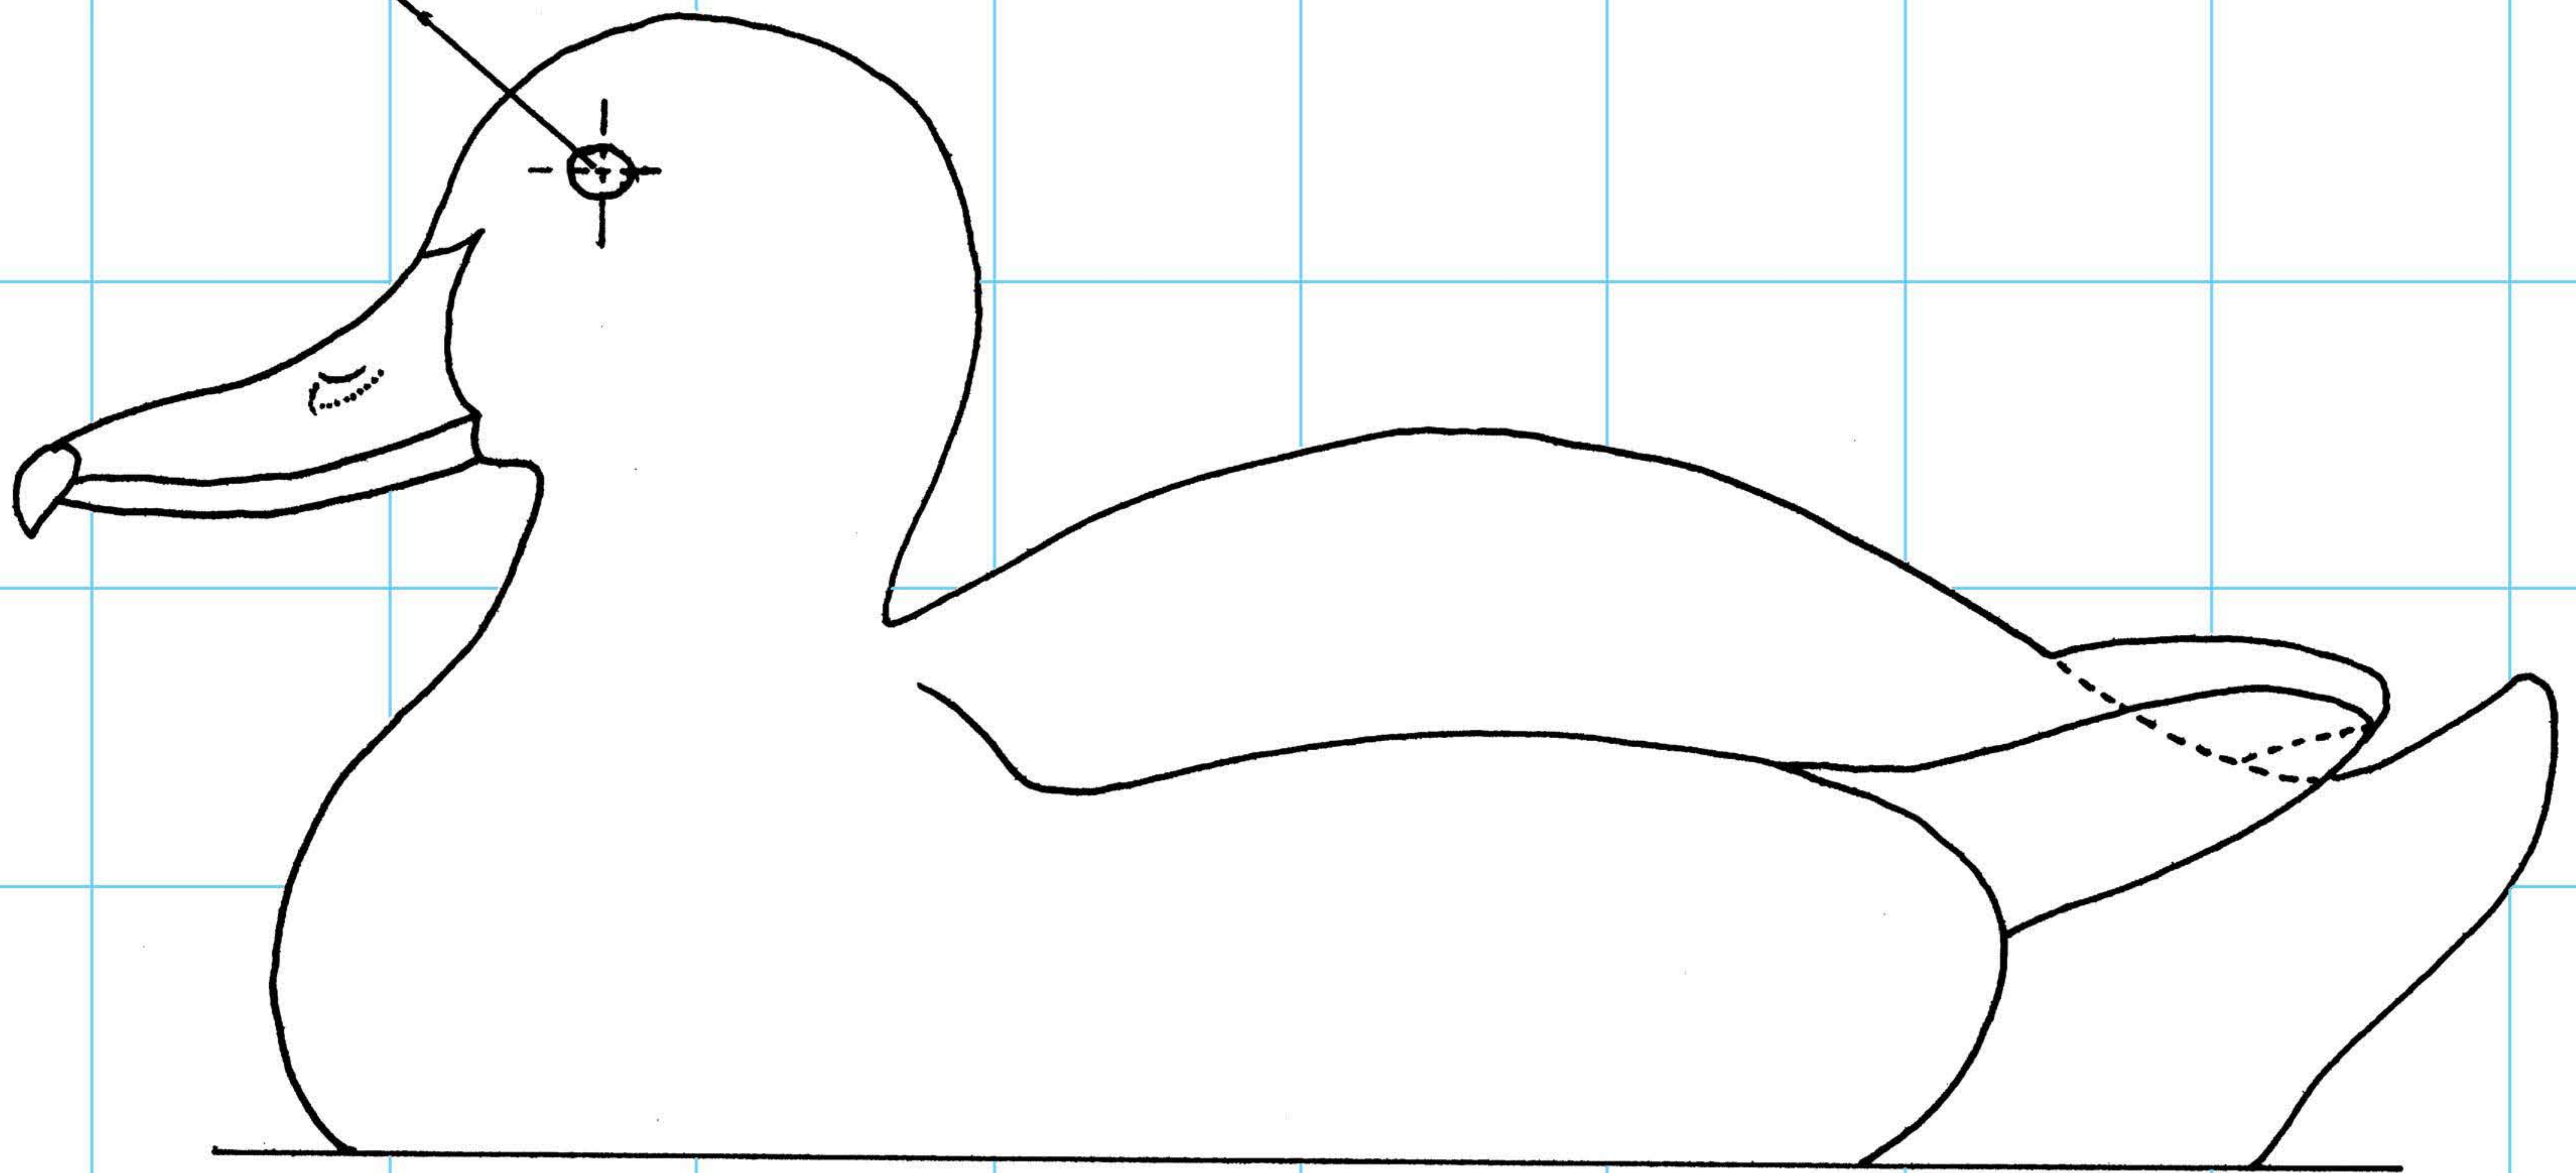